

TIME SIGNAL RECEIVER MODULE



- Tuned ferrite antenna
- AM receiver IC board
- Reception of:
  - German DCF77
  - US WWVB
  - British MSF
  - Japanese JJY60

## INTRODUCTION

The time signal receiver module comprises of a ferrite antenna and an AM receiver IC printed circuit board. The board includes a MAS6180B1 AM receiver IC accompanied with necessary filter crystal and capacitor components. The circuitry includes also an RC-filter for the supply voltage. The EB6180B1COB77K5A1 module is tuned for 77.5 kHz and suitable for receiving German DCF77 time signal transmission whereas the EB6180B1COB60K0A1 and A2 modules are tuned for 60 kHz suitable for receiving US WWVB, British

MSF and Japanese JJY60 time signal transmissions. The A2 module with 100mm antenna bar is especially suited for WWVB to cover the weak signal areas.


The MAS6180B1 AM receiver IC includes amplifier, demodulator and comparator blocks that transforms the received AM transmission into series of pulse width coded digital pulses which can be directly processed by an appropriate digital circuitry such as a micro controller unit (MCU).

## **PIN DESCRIPTION**

| Pin ID | Туре | Function                      | Note                                     |
|--------|------|-------------------------------|--|
| P1     | DI   | PDN (power down) control pin  | HIGH = receiver off<br>LOW = receiver on |
| Т      | DO   | Time pulse output             |  |
| P2     | NC   | -                             | Leave unconnected                        |
| G      | G    | Supply ground                 |  |
| V      | Р    | Supply voltage                |  |
| AON    | DI   | AGC on/off control (optional) | Leave unconnected when not used          |


D = Digital, P = Power, G = Ground, I = Input, O = Output, NC = Not Connected

PCB backside pin marking

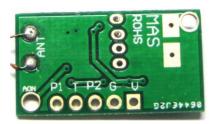




## **APPLICATION INFORMATION**

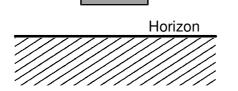



The magnetic field component of the propagating long wave time signal transmission has a horizontal polarization thus the ferrite antenna should be oriented horizontally to maximize the signal (see figure 1).

Figure 1. Antenna orientation relative to ground

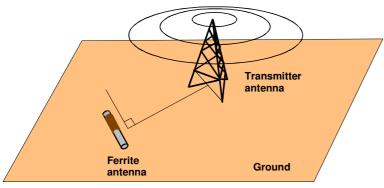

The ferrite antenna should also be pointing orthogonally relative to the transmitter (see figure 2).

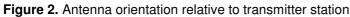

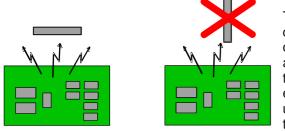

The ferrite bar antenna should be located as far as possible from conductive metal walls, PCB ground plane or ferromagnetic objects (speakers). All those objects affect the antenna tuning and can attenuate the received signal. To avoid noise coupling the ferrite antenna should also not be pointing towards noisy electronic circuits (figure 3). It is a good practice to turn off all unnecessary electronic circuits when receiving the weak radio transmission.

Figure 3. Antenna orientation relative to noisy electric circuits

## Getting a signal

The antenna is sensitive for magnetic and electric disturbances. As an example, in digital radio controlled clocks it is known that LCD displays, refreshed using a 32Hz signal, has a1875th odd harmonic hitting exactly at 60kHz and its amplitude can be strong enough ( $\mu$ Vrms level) to reduce the sensitivity. The antenna and module placement is critical and one should maximize distance to other disturbing electronics and metal/ferrous parts which might affect the antenna and the reception.

A good place to start is to put the module close to a window and turn the antenna to an optimal position relative the transmitter (see the figure 2 above). As the second step trigger the fast startup by moving PDN control from power down (PDN=VDD) to power up (PDN=VSS) which will make the AGC find its level within a few seconds if the receiving conditions are sufficient. Initially the OUT signal should be high but soon after finding a signal (or disturbance in case of poor SNR) the output goes low and after a few seconds it should start receiving pulses. If the output stays low all the time there is probably some disturbance stronger than the signal. If the signal is bad, change location and repeat the fast startup by setting PDN=VDD (power down) to PDN=VSS (power up).




# **ELECTRICAL CHARACTERISTICS**

| Operating Conditions: VDD = 1.5V, Temperature = 27 °C, unless otherwise s |                    |   |          |                      | specified. |      |
|---|--------------------|---|----------|----------------------|------------|------|
| Parameter   | Symbol             | Conditions  | Min      | Тур                  | Max        | Unit |
| Operating Voltage   | V <sub>DD</sub>    |   | 1.1      | 1.5                  | 3.6        | V    |
| Current Consumption   | I <sub>DD</sub>    | VDD=1.5 V, weak signal<br>VDD=1.5 V, strong signal<br>VDD=3.6 V, weak signal<br>VDD=3.6 V, strong signal            | 31<br>24 | 66<br>40<br>68<br>42 | 85<br>65   | μΑ   |
| Stand-By Current  | I <sub>DDoff</sub> |   |          |                      | 0.1        | μA   |
| Receiving Frequency   | f <sub>IN</sub>    | module EB6180B1COB77K5A1<br>module EB6180B1COB60K0A1<br>module EB6180B1COB60K0A2<br>See ordering information below. |          | 77.5<br>60<br>60     |            | kHz  |
| Sensitivity   | E <sub>MIN</sub>   |   |          | 25                   |            | μV/m |

Note: For more detailed electrical characteristics see MAS6180B1 AM receiver IC datasheet


# **MECHANICAL DIMENSIONS**

| Parameter |           | Symbol           | Conditions     | Min  | Тур  | Max  | Unit |
|-----------|-----------|------------------|----------------|------|------|------|------|
| Antenna   |           |                  |                |      |      |      |      |
|           | length    | L <sub>A</sub>   | A1 antenna bar | -3   | 60   | +3   | mm   |
|           | Ũ         |                  | A2 antenna bar | -3   | 100  | +3   |      |
|           | width     | WA               |                | -0.3 | 10   | +0.3 |      |
|           | height    | HA               |                | -0.3 | 9    | +0.3 |      |
| PCB       |           |                  |                |      |      |      |      |
|           | length    | L <sub>PCB</sub> |                | -0.2 | 25.0 | +0.2 | mm   |
|           | width     | W <sub>PCB</sub> |                | -0.2 | 13.5 | +0.2 |      |
|           | thickness | T <sub>PCB</sub> |                | -0.1 | 1.3  | +0.1 |      |

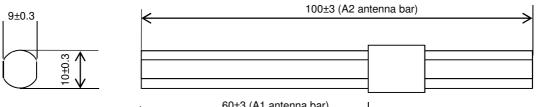




| 60 | )±3 (A1 an | tenna bar) |
|----|------------|------------|
|    |            | /          |
|    |            |            |
|    |            |            |
|    |            |            |
|    |            |            |

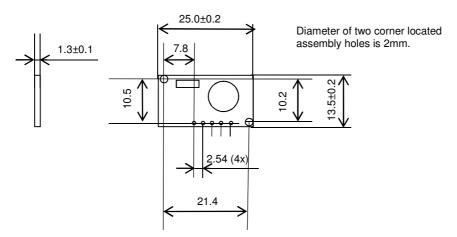



## **CIRCUIT SCHEMATIC**

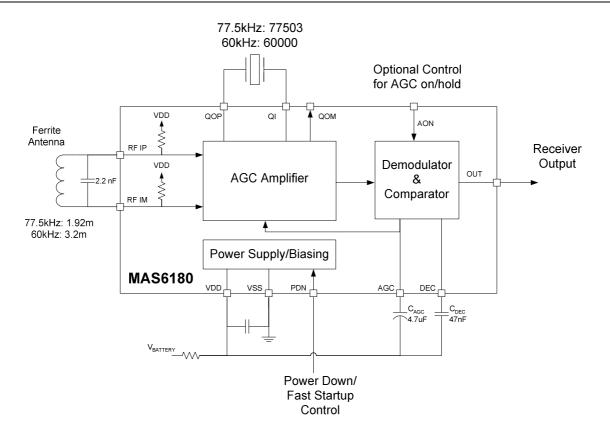

**Note:** The two attachment holes on the PCB corners have electrical connection to AON and GND. Ensure proper isolation when attaching to conductive enclosure.

## **ORDERING INFORMATION**

| Product Code      | Product                              | Antenna         |  |
|-------------------|--------------------------------------|-----------------|--|
| EB6180B1COB77K5A1 | 77.5kHz DCF77 receiver module        | A1: 60x10x9 mm  |  |
| EB6180B1COB60K0A1 | 60kHz WWVB/MSF/JJY60 receiver module | A1: 60x10x9 mm  |  |
| EB6180B1COB60K0A2 | 60kHz WWVB/MSF/JJY60 receiver module | A2: 100x10x9 mm |  |

Note: Modules are RoHS compliant.

# MICRO ANALOG SYSTEMS OY CONTACTS

| Micro Analog Systems Oy    | Tel. +358 10 835 1100 |
|----------------------------|-----------------------|
| Kutomotie 16               | Fax +358 10 835 1119  |
| FI-00380 Helsinki, FINLAND | http://www.mas-oy.com |

#### NOTICE

Micro Analog Systems Oy reserves the right to make changes to the products contained in this data sheet in order to improve the design or performance and to supply the best possible products. Micro Analog Systems Oy assumes no responsibility for the use of any circuits shown in this data sheet, conveys no license under any patent or other rights unless otherwise specified in this data sheet, and makes no claim that the circuits are free from patent infringement. Applications for any devices shown in this data sheet are for illustration only and Micro Analog Systems Oy makes no claim or warranty that such applications will be suitable for the use specified without further testing or modification.